

HTS Automatic Transfer Switch

100 - 400 Amps 600 VAC



200 Amp HTS NEMA 1

DESCRIPTION

- The Generac HTS Transfer Switch is a “State of the Art” Smart Switch designed to operate in conjunction with the Generac H100 Series generator controller.
- The HTS Transfer Switch has a 2 wire RS485 communication link to the generator controller.
- The utility voltage is monitored by the HTS along with signal before transfer timing, time delay neutral and inphase transfer.
- Switch operation is instigated by the generator controller.
- All timers and voltage setpoints are programmable through GenLink® Communications Software.
- Time delay neutral and inphase monitor are included.

STANDARD FEATURES

- Single coil design, electrically operated and mechanically held
- Programmable exercise time
- SPDT aux contacts
- Main contacts are silver alloy
- Conformal coating protects the printed circuit board
- UL1008 Listed
- Indicating LED's for switch position, standby operating, utility available
- 3 position test switch: Fast Test, Auto, Normal Test
- Arc shutes on main contacts
- Signal before transfer contacts
- Rated to all classes of loads
- Remote start, stop and transfer through GenLink® Communications Software
- Up to four transfer switches per generator
- 50/60 hertz operation

OPTIONAL ACCESSORIES

- NEMA 12 enclosure (100-400 Amps)
- NEMA 3R enclosure (All)
- NEMA 4 and 4x enclosure
- 4 pole for separately derived systems

GENERAC®
POWER SYSTEMS, INC.

INTERCONNECTIONS

HTS 100-400 Amp

Switches and Indicators:


- System Ready LED
- Switch Position LED's
- Test Switch
- Return to Normal Switch
- Standby Operating LED
- Utility Available LED
- Fast Test Switch
- Safety Disconnect Switch

Standby Accept Voltage	85-95%
Standby Accept Frequency	85-95%
Nominal Voltage.....	1 Volt Increments
Allowable Deviation of Utility	1-100%
Line Interruption Delay	1-10 Seconds
Engine Warmup Time	1-300 Seconds
Minimum Run Time	5-60 Minutes
Return to Utility Timer.....	1-30 Minutes
Engine Cooldown Timer	1-30 Minutes
Signal Before Transfer Timer	1-30 Seconds
Transfer Type	Inphase Time Delay Neutral
Phase Difference for Inphase Transfer	-7 +0 Degrees

WITHSTAND CURRENT – 600 VOLT HTS SERIES

GTS RATED AMPS	100	150	200	300	400
FUSE PROTECTED					
Maximum RMS Symmetrical Fault Current – Amps	200,000	200,000	200,000	200,000	200,000
Maximum Fuse Size – Amps	200	400	400	600	600
Fuse Class	J,T	J,T	J,T	J,T	J,T
CIRCUIT BREAKER PROTECTED					
Maximum RMS Symmetrical Fault Current – Amps	14,000	25,000	25,000	35,000	35,000
Protective Device Continuous Rating (Max.) – Amps	150	300	300	600	600

- Tested in accordance with the withstand and closing requirements of UL 1008 and CSA Standards.
- Current ratings are listed @ 480 VAC.

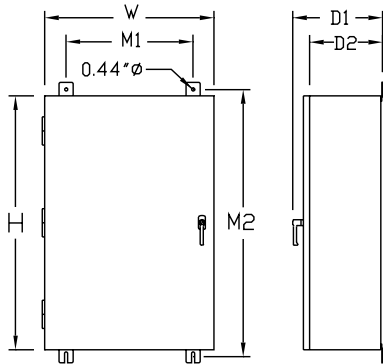

UNIT DIMENSIONS

CTS RATED AMPS	VOLTAGE	ENCLOSURE HEIGHT H	ENCLOSURE WIDTH W	WALL MOUNT BOLT PATTERN		ENCLOSURE DEPTH		WEIGHT (lbs.)
				M1	M2	D1	D2	
100	ALL	36	24	18	37.5	12.7	10	180
150-200	120/240	36	24	18	37.5	12.7	10	185
150-200	120/208	36	24	18	37.5	12.7	10	185
150-200	277/480	48*	30*	24	49.5	14.8	12	265
300-400	120/240	36	24	18	37.5	12.7	10	245
300-400	120/208	36	24	18	37.5	12.7	10	245
300-400	277/480	48*	30*	24	49.5	14.8	12	325

TERMINAL LUG WIRE RANGES

GTS RATED AMPS	CONTACTOR TERMINALS (1 LUG PER POLE) LUG WIRE RANGE	NEUTRAL BAR*		GROUND LUG (1 PROVIDED) LUG WIRE RANGE
		# LUGS	LUG WIRE RANGE	
100	2/0 – 14 AWG	4	2/0 – 14 AWG	2/0 – 14 AWG
150	400MCM – 4 AWG	4	350MCM – 6 AWG	350MCM – 6 AWG
200	400MCM – 4 AWG	4	350MCM – 6 AWG	350MCM – 6 AWG
300	600MCM – 4 AWG	4	600MCM – 4 AWG	350MCM – 6 AWG
	or 2 – [250MCM – 1/0 AWG]		[250MCM – 1/0 AWG]**	350MCM – 6 AWG
400	600MCM – 4 AWG	4	600MCM – 4 AWG	350MCM – 6 AWG
	or 2 – [250MCM – 1/0 AWG]		[250MCM – 1/0 AWG]**	

* Not included in HTS with switched neutral. ** Allowable wire range in brackets is for 2 wires per lug.

GENERAC® POWER SYSTEMS, INC. • P.O. BOX 8 • WAUKESHA, WI 53187
262/544-4811 • FAX 262/544-4851